



KERN & Sohn GmbH

Ziegelei 1
72336 Balingen-Frommern
Germany

+0049-[0]7433-9933-0
+0049-[0]7433-9933-149
info@kern-sohn.com

Operating manual KERN Interface Adapter with Cable for RS232 and Signal lamp

KERN YKUP-01

Type TYKUP-01-A
Version 1.0
2021-09
GB



You will find the current version of these instructions also online under:
<https://www.kern-sohn.com/shop/de/DOWNLOADS/>
Under the column Operating instructions

TYKUP-01-A-BA-e-2110_RS232



KERN Interface Adapter with Cable

Version 1.0 2021-09

Installation Instructions for RS232 and Signal lamp

Contents

1	General hints	2
1.1	Installation.....	2
1.1.1	Allocation of connections KUP adapter:.....	3
1.1.2	Setting communication parameters:	3

1 General hints

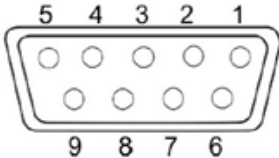
Cable length: 1.5 m

i	<ul style="list-style-type: none">• Via the interfaces weighing data may be exchanged with connected peripheral devices.• Issue may be made to a printer, PC or control displays. Control commands and data input may also occur at reverse order via the connected devices.• Only KERN KUP adapters may be connected to the 15-pol-sub-D-plug of the device!
----------	--

1.1 Installation

- Switch off the balance
- Plug in the KUP adapter (RS232) at the 15-pol-sub-D-plug of the device
- Switch on device
 - The KUP adapter is automatically recognised by the appliance

1.1.1 Allocation of connections KUP adapter:

Sub-D bushing 9 pol. (bushing = to balance)		
	Pin 1	VB
	Pin 2	TXD (RS232)
	Pin 3	RXD (RS232)
	Pin 4	VCC
	Pin 5	Signal ground (RS232)
	Pin 6	Low Signal (signal light for Checkweighing)
	Pin 7	Hi Signal (signal light for Checkweighing)
	Pin 8	OK Signal (signal light for Checkweighing)
	Pin 9	No assignment

1.1.2 Setting communication parameters:

i	<p>The communication parameters (baud rate, bits and parity) of balance and printer/PC must match.</p> <p>KERN standard settings (factory setting):</p> <ul style="list-style-type: none"> • baud 9600 • 8 data bit • 1 stop bit • No parity
----------	---