



Sauter GmbH


Ziegelei 1
D-72336 Balingen
E-Mail: info@kern-sohn.com

Tel.: +49-[0]7433- 9933-0
Fax: +49-[0]7433-9933-149
Internet: www.sauter.eu

User manual / Data sheet

SAUTER CP Y1

V. 1.0
11/2020
GB

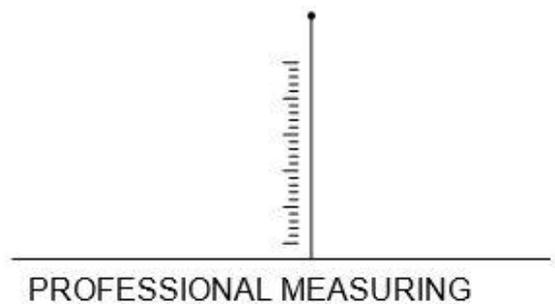



SAUTER CP Y1

V. 1.0 11/2020

User manual / Data sheet

Summarize:

1	Brief description	3
2	Available models.....	3
3	Introduction.....	3
4	Warnings	3
5	Warranty	4
6	Technical data.....	4
7	Electrical connection.....	4
8	Dimensions in mm.....	5
9	Declaration of conformity	5

1 Brief description

- Low Budget Single-Point anodized aluminum load cell
- Protection class IP65 (according to EN 60529)
- RoHS compliant
- Suitable for price computing scales, table scales, etc.
- Maximum platform size: 250 x 350 mm
- Accuracy class C2 according to OIML R60

2 Available models

Nominal	Model
3kg	CP 3-2Y1
5kg	CP 5-2Y1
10kg	CP 10-2Y1
15kg	CP 15-2Y1
20kg	CP 20-2Y1
30kg	CP 30-2Y1

3 Introduction

Please observe the notes in the operating instructions: Please read this operating manual carefully before commissioning, even if you already have experience with SAUTER measuring cells.

After receipt of the measuring cell, it should be checked in advance to ensure that no transport damage has occurred, that the repackaging or other parts or even the article itself have not been damaged. If any damage is evident, please notify SAUTER GmbH immediately.

4 Warnings

Observe the national accident prevention regulations.

Incorrect use of the measuring cells can lead to serious injury, death, damage to property and personal injury. Use may only be carried out by trained and experienced personnel.

Never load measuring cells beyond the range E_{max} (nominal load, max. capacity). Overloaded measuring cells no longer have the required accuracy. Overloaded or deformed measuring cells must not be used any further and must be replaced immediately.

Never step under suspended loads.

Always install overload or breakage protection on your system.

Always observe the permissible static and dynamic loads of the accessories you use.

Have measuring cells calibrated at regular intervals.

Only load the measuring cell in the direction indicated. Avoid lateral forces.

Check the measuring cells regularly for deformations and cracks.

For measuring cells with 4-wire connection, the characteristic value changes by shortening or lengthening the supplied cable.

5 Warranty

The warranty expires with:

- Disregarding the instructions in the operating manual
- Change or open the measuring cell
- Overload
- Mechanical damage
- Damage by liquids or media
- Natural wear and tear
- Improper setup or electrical installation


6 Technical data

Output sensitivity (= FS)	mV/V	2.0 ± 0.2
Maximum capacity (Emax)	kg	3, 5, 10, 15, 20, 30
Combined Error	%FS	≤± 0.03
Minimum dead load	Of Emax	0%
Safe overload	of Emax	120 %
Ultimate overload	of Emax	150 %
Zero balance	of FS	< ± 1,5 %
Excitation, recommended voltage	V	9 ~ 12
Input resistance	Ω	405 ± 10
Output resistance	Ω	350 ± 3
Insulation resistance	MΩ	≥5000 (at 50VDC)
Operating temperature	°C	-20...+60


7 Electrical connection

Shielded PVC cable, shield not connected to element, cable diameter Ø3,8mm, standard cable length: 0,4m

4-wire connection diagram

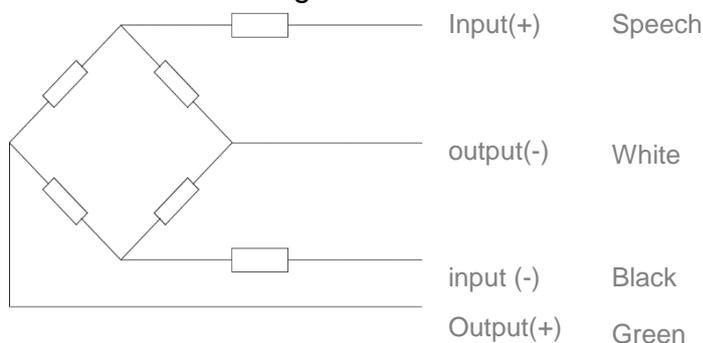

8 Dimensions in mm

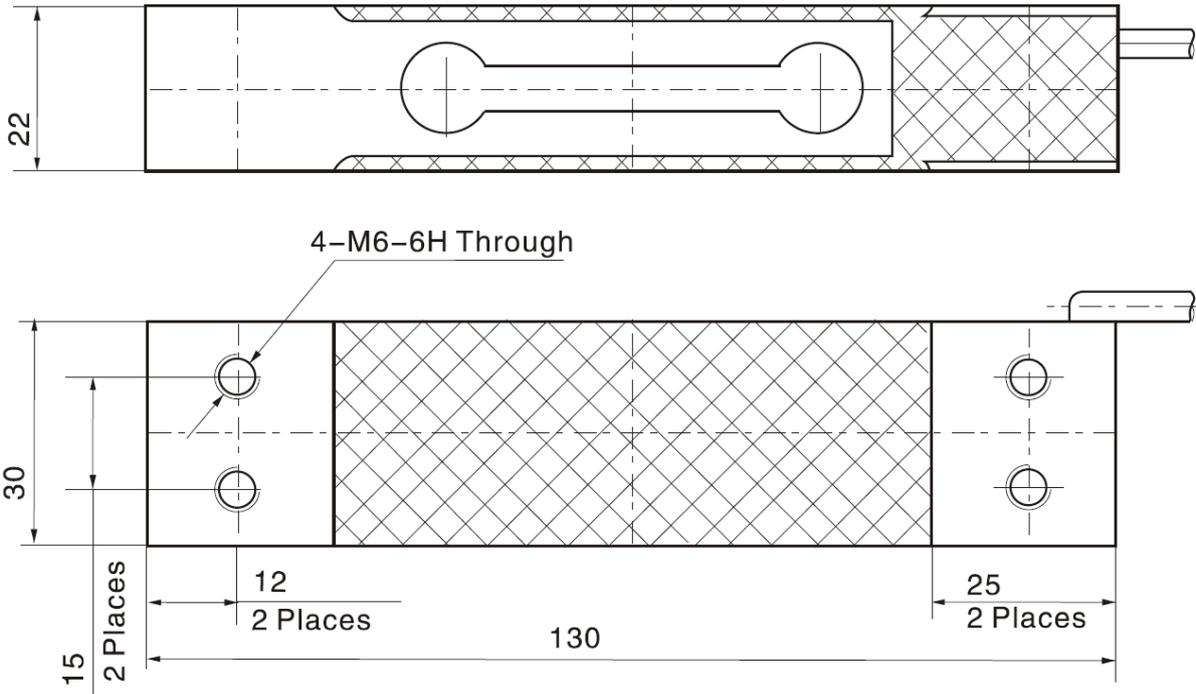

9 Declaration of conformity

To view the CE declaration, please click on the following link:
<https://www.kern-sohn.com/shop/de/DOWNLOADS/>