


Entlastungsventile

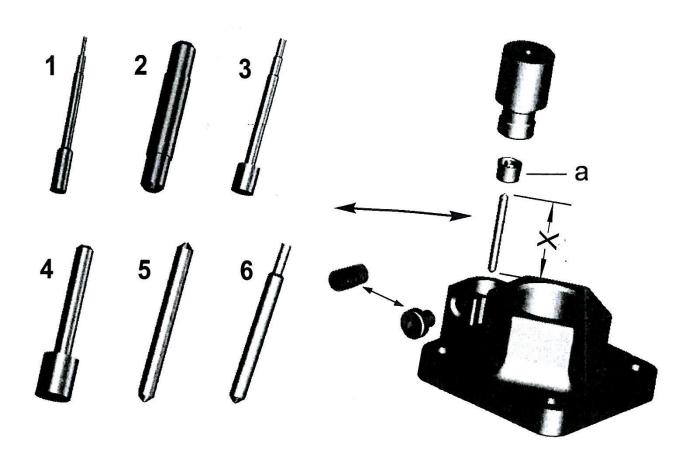

	Тур	X mm	а		Тур	X mm	а		Тур	X mm	а		Тур	X mm	а
EV 2 EV 2i EV 2S EV 2W EV 2Wi EV 2WS EV 2M5 EV 2iM5	6 6 6 2 2 2 6 6	24,7 24,7 24,7 16,3 16,3 16,3 28,3 28,3	+ + + + + +	EV 3 EV 3i EV 3S EV 3W EV 3Wi EV 3WS EV 3M5 EV 3IM5 EV 3L	6 6 6 2 2 2 6 6 1	26,2 26,2 26,2 18,2 18,2 18,2 30,1 30,1 37,9	+ + + + + + + + +	EV 4 EV 4i EV 4S EV 4W EV 4Wi EV 4WS EV 4M5 EV 4iM5	6 6 6 2 2 2 6 6	26,2 26,2 26,2 18,2 18,2 18,2 30,1 30,1	+ + + + + + + + +	EV 5 EV 5i EV 5E EV 5Ei EV 5H	3 3 3 1 1	35,9 35,9 29,8 29,8 41,1 41,1	+ + + + + +

-	Тур	X mm	а		Тур	X mm	а		Тур	X mm	а		Тур	X mm	а
AEV 2	5	21,8	+	AEV 3	5	23,9	+	AEV 4	5	24,3	+	AEV 5	4	24,7	+
AEV 2i	5	21,8	+	AEV 3i	5	23,9	+	AEV 4i	5	24,3	+	AEV 5i	4	24,7	+
AEV 2S	5	13,1	-	AEV 3S	5	14,8	-	AEV 4S	5	14,8	-	,,	1		
NEV 2W	5	16,3	+	AEV 3W	5	18,2	+	AEV 4W	5	18,2	+				
NEV 2Wi	5	16,3	+	AEV 3Wi	5	18,2	+	AEV 4Wi	5	18,2	+				
AEV 2WS	5	16,3	+	AEV 3WS	5	18,2	+	AEV 4WS	5	18,2	+		1		

P R-34

Montageanleitung Entlastungsventile



Gilt für folgende Artikel:

Entlastungsventil	
Artikel Nr.	Typen Nr.
103041	EV 2
103051	EV 3
103061	EV 5