




## KL-0369-303 A

Disassembly/Mounting Tool for Centring/Guide Sleeve



**Product information** EN  
⚠ Read and understand before use!

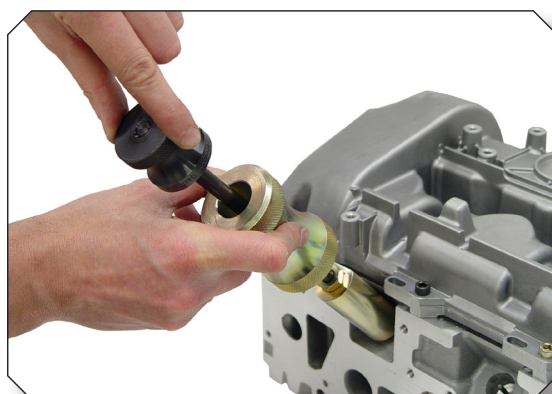

[www.gedore-automotive.com](http://www.gedore-automotive.com)



### GEDORE Automotive GmbH

Breslauer Straße 41  
78166 - Donaueschingen  
Postfach 1329  
78154 Donaueschingen - GERMANY

☎ +49 (0) 771 / 8 32 23-0  
☎ +49 (0) 771 / 8 32 23-90  
✉ info.gam@gedore.com  
🌐 gedore-automotive.com

### GEDORE TOOLS, INC.

Only for USA, Canada & Mexico / Sólo para EE.UU., Canadá y México  
Seulement pour les USA, le Canada et le Mexique  
7187 Bryhawke Circle, Suite 700  
North Charleston, SC 29418, USA

☎ +1-843 / 225 50 15  
☎ +1-843 / 225 50 20  
✉ info@gedoretools.com  
🌐 gedore.com

Version 02/2023

0369-303A\_EN230109.indd

## Product description

### KL-0369-303 A- Disassembly/mounting tool for centring/guide sleeve

Suitable for glow plug tool kits, e.g. KL-0132-52 KB.

Required when boring out glow plugs, for professional fixing and extraction of the centring and guide sleeves on the cylinder head.

### Scope of supply/single parts overview

Item	Part no.	Description	Qty.
A	KL-0049-100 A	Impact extractor	1
B	KL-0369-3031 B	Base body	1

### Specifications

For engine type: .....Diesel  
 Length: ..... 280mm  
 Length of sliding surface: ..... 150mm  
 Impact weight: .....800g

### ⚠ Safety instructions and regulations

- ✔ **Before using** the special tools, read and understand **all** safety instructions and follow them for **safe use!**
- ✔ Use the special tools **as intended**, and always perform maintenance tasks and repairs in compliance with the regulations on occupational safety and accident prevention and with the instructions by the vehicle manufacturer!
- ✔ **Prior to each use**, check the special tools **carefully** for damage, loose parts or unauthorised modifications. **Never** use it if you notice any such deficiencies!
- ✔ **Always** wear your personal protective equipment (for example safety goggles, protective gloves, safety shoes) when working!

### Typical application

1. Place the disassembly/assembly tool on the **collar of the centring sleeve** as shown.
2. By lightly hitting it with the impact weight, you now fully seat it together with the **guide sleeve** in the glow plug bore on the cylinder head.

ⓘ The removal of the sleeves is done later in the same way.

EN

