KL-4021-310

Kit of Screwdriver Bits 3/8“ with Ball Head

Product information EN

Read and understand before use!

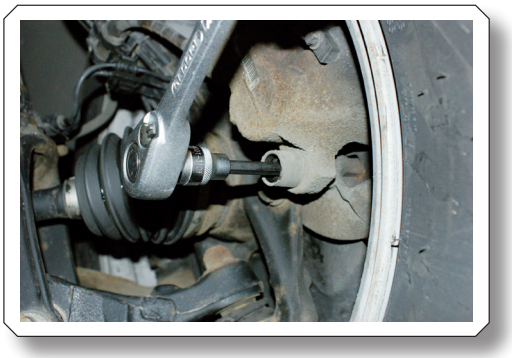

www.gedore-automotive.com

GEDORE Automotive GmbH
Breslauer Straße 41
78166 - Donaueschingen
Postfach 1329
78154 Donaueschingen - GERMANY
+49 (0) 771 / 8 32 23-0
+49 (0) 771 / 8 32 23-90
info.gam@gedore.com
gedore-automotive.com

GEDORE TOOLS, INC.
Only for USA, Canada & Mexico / Sólo para EE.UU., Canadá y México
Seulement pour les USA, le Canada et le Mexique
7187 Bryhawke Circle, Suite 700
North Charleston, SC 29418, USA
+1-843 / 225 50 15
+1-843 / 225 50 20
info@gedoretools.com
gedore.com

Worldwide GEDORE service centers and offices are listed on the Internet at: **www.gedore.com**

Version 1 - 01/2022

4021-310_EN220104.indd

Product description

KL-4021-310 - Kit of screwdriver bits 3/8“ with ball head

Universal fit for Brake calliper fastening screws, for example for VW-Audi, Seat, Škoda, BMW, Mercedes, Volvo, Opel, Renault, PSA, and many others.

For easy removal and tightening of brake calliper fastening screws. The special spherical head of the screwdriver bits also allows to work at an offset angle, for examples in areas which can only be accessed with difficulty.

EN

Scope of supply/component overview

Item	Part no.	Description	Qty.
	KL-4021-310	**Kit of screwdriver bits 3/8“ with ball head**	**1**
A	KL-4021-3107 A	Screwdriver bit, size 7mm	1
B	KL-4021-3109 A	Screwdriver bit, size 9mm	1
C	KL-4021-3111 A	Screwdriver bit, size 11mm	1

Specifications

Size:..... 7 / 9 / 11mm

Drive: ..... 3/8“

Length: 100mm

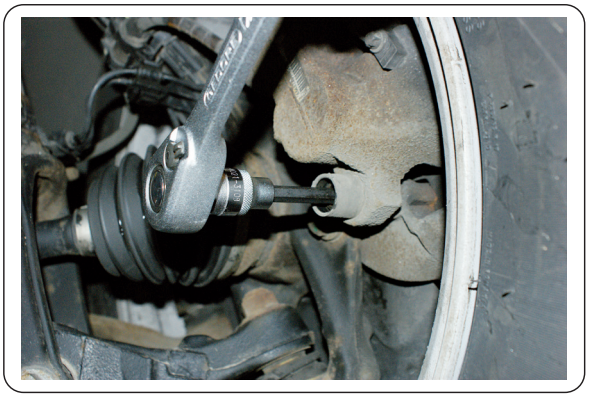

⚠Safety instructions and regulations

- **Before using** the special tools, read and understand all safety instructions and **follow** them for **safe use**!
- Use the special tools **as intended** and **always** carry out maintenance and repair work in compliance with the regulations on occupational safety and accident prevention as well as the vehicle manufacturer's instructions!
- **Prior to each use**, check the special tools **carefully** for damage, loose parts or unauthorised modifications. **Never** use it if you notice any such deficiencies!
- **Always** wear your personal protective equipment *(for example safety goggles, protective gloves, safety shoes)* when working!

4021-310_EN220104.indd
© Copyright by GEDORE Automotive GmbH, Germany